

nweb Quick Reference Card for the Nokia 6600/6620


nweb is easy to use because it works much like the Web browsers you use on your desktop computer. You can load Web pages and create bookmarks to your favorite pages. More importantly, nweb is designed to be used on the small screen of your phone.

Cell phone features, functions and buttons vary between models and manufacturers. You should have knowledge of the use and navigation features of your phone. You should refer to the user documentation provided by the manufacturer or service provider for your phone.

For detailed information on the use of **nweb**, see the **nweb version 5.0 for the Nokia 6600 User's Guide**.

Use of the Phone Navigation Joystick

The **Navigation Joystick** on your phone allows you to move around the menus and Web pages in **nweb**. Move the joystick up, down, left and right (shown with red arrows 1 to 4) to navigate the Main Menu or Web page. Scroll to a menu item and press the center of the joystick (shown with red arrow 5) to initiate the choice.

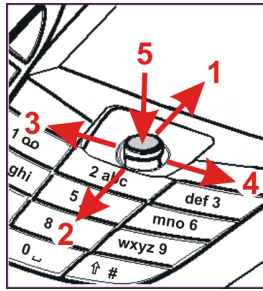

Clear Key

The **Clear Key** takes you back to the previous screen. When in a text input box, the **Clear Key** removes one character to the left each time it is pressed.

Popup Menus


The **Options Softkey** opens a popup menu containing one or more options. Scroll to a menu item and press the center of the **Navigation Joystick** (shown with red arrow 5) or press the **Select Softkey** to initiate the choice. Press the **Cancel Softkey** to close the popup menu with no action taken.

Closing nweb

Selecting **Exit** and press the **OK Softkey** in the **Main Menu** will close **nweb**.

nweb Main Menu

The **Main Menu** is the place to go to perform the various functions found in **nweb**. To get to the **Main Menu**, press the **Menu Softkey from any Web page**, or **Options Softkey** and select **Menu**. Select the function you want to perform by highlighting the appropriate icon using the **Navigation Joystick**. Use the **OK Softkey** to launch the function.

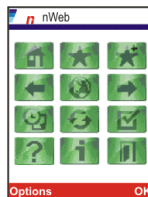

Main Menu Shortcuts

NOTE The Main Menu shortcuts only work when on a Web page or the Main Menu.

nweb provides shortcuts to the **Main Menu**. Pressing the assigned key while on a Web page or the **Main Menu** will initiate the function. Example: Pressing the **5 Key** will open the **Address** screen (same as selecting the **Load** icon). The table below shows the various icons and shortcuts for the menu commands.

Main Menu Icons

The table below describes the various **Main Menu** icons and their corresponding functions.

Icon	Menu Command	Shortcut Key	Meaning
	Home	1	Selecting this icon and pressing the OK Softkey takes you to your home page.
	Show Favorites	2	Selecting this icon and pressing the OK Softkey displays the Favorites screen. The screen contains a list of saved Web addresses. (See Favorites Screen Softkeys .)
	Add To Favorites	3	Saves the current Web address to your Favorites list. Start from the page you want to bookmark and open the Main Menu . Select this icon and press the OK Softkey .
	Back	4	Allows you to return to a page or series of pages that had been previously visited. Open the Main Menu . Select this icon and press the OK Softkey .
	Load	5	Opens the Address : screen where you can enter a Web address. Open the Main Menu . Select this icon and press the OK Softkey . Enter the Web address and press the OK Softkey . (See Address: Screen Softkeys .)
	Forward	6	Allows you to return to a page or series of pages that had been visited after the Back function had been used. Open the Main Menu . Select this icon and press the OK Softkey .
	History	7	Selecting this icon and pressing the OK Softkey displays the History screen. The screen contains a list of visited Web addresses. (See History Screen Softkeys .)
	Refresh	8	Displays an updated (refreshed) version of the current Web page. From the current Web page, open the Main Menu . Select this icon and press the OK Softkey .
	Options	9	Selecting this icon and pressing the OK Softkey displays the Options screen. On this screen, various features can be enabled/disabled.

Icon	Menu Command	Shortcut Key	Meaning
	Help	*	Selecting this icon and pressing the OK Softkey displays the nweb Help page.
	About	0	Selecting this icon and pressing the OK Softkey displays the nweb by Novarra Version page. (See About Screen Softkeys .)
	Exit	n/a	Selecting this icon and pressing the OK Softkey takes you out of nweb client and back to the screen from where you launched nweb .

Softkeys

When browsing the Web, the bottom line of your phone's display identifies one or more softkeys. These keys are shortcut controls and they correspond to the softkey buttons directly below the phone's display. Depending on where the cursor is present on the Web page, or on a menu, will determine what function the softkeys will perform.

To use, press the corresponding softkey. If an additional popup menu appears when you press the softkey, select the menu options by highlighting the option using the up/down of the **Navigation Joystick** and pressing the center of the **Navigation Joystick** or pressing the **Select Softkey**.

About Screen Softkeys

Selecting the **About** icon opens the **nweb** by Novarra Version page. This page contains version and copyright information.

Options Softkey
OK - Returns you to the previous screen.
Exit - The application is closed.

Address: Screen Softkeys

Selecting the **Load** icon opens the **Address**: screen. From this screen you can enter and launch the Web address you want to visit. You do not need to enter the protocol if it is http://. However, you must enter other protocols, such as https://. Enter the Web address and press the **OK Softkey**.

Options Softkey	OK Softkey
Cancel - Takes you to the previous screen with no action taken.	Launches the entered Web address.
Exit - The application is closed.	

Advanced Options Screen Softkeys

Selecting the **Options** icon opens the **Options** screen. Pressing the **Options Softkey**, selecting **Advanced** and pressing the **Select Softkey** opens the **Advanced Options** screen. From this screen, certain features and options can be changed. If changes are made, press the **Options Softkey**, select **OK** and Press the **Select Softkey**.

Options Softkey

Cancel Softkey

OK - Saves changes to the options and returns you to the previous screen.

Takes you to the previous screen with no action taken.

Exit - The application is closed.

Edit Favorite Screen Softkeys

The **Edit Favorite** screen opens when either **Edit Favorite** or **Add** is chosen in the **Favorites** screen **Menu Softkey**. To use, open this screen and edit/add a title for the Web page and the URL (Web address). Press the **Options Softkey** and select **OK**. Press the **Select Softkey**.

Options Softkey

OK - Saves changes to the favorite and returns you to the Favorite screen.

Cancel - Takes you to the previous screen with no action taken.

Exit - The application is closed.

Favorites Screen Softkeys

Selecting the **Show Favorites** icon opens the **Favorites** screen. A favorite (bookmark) in **nweb**, does not store the actual page. It stores a reference to the page's Web address (URL). A Favorite remains in memory until deleted by the user. To use, open this screen and select the Favorite you want to open, edit or delete. Press the **Options Softkey** and select the option you want. Press the **Select Softkey**. Other options are also available.

Options Softkey

Open - Launches the selected Favorite.

Edit Favorite - Opens the Edit Favorite screen with the information for the selected favorite.

Delete - Deletes the selected Favorite.

Add - Opens the Edit Favorite screen with empty text fields.

Done - Closes Favorites screen and take you back to the last page.

Exit - The application is closed.

History Screen Softkeys

Selecting the **History** icon opens the **History** screen. The **History** list contains a record of all the pages you recently visited when you used the **Load** or **Click** commands. To use, open this screen and select the Web address you want to open. Press the **Options Soft-**

key and select **Open**. Press the **Select Softkey**. Other options are also available.

Options Softkey

Open - Launches the selected Web page in the History list.

Clear History - Clears all references to Web pages in the History list.

Done - Closes History screen and take you back to the last page.

Exit - The application is closed.

Main Menu Softkeys

Highlighting a **Main Menu** icon and pressing the **OK Softkey** initiates that function.

Options Softkey

OK Softkey

Cancel - Takes you to the previous screen with no action taken.

Exit - The application is closed.

Activates the selected icon's function.

Multiple-Choice Dropdown List

Use the **Navigation Joystick** and highlight the drop-down list on a Web page. Press the center of the **Navigation Joystick** to open the list. Select the item on the list you want and press the center of the **Navigation Joystick**. Repeat for each item you want. To deselect an item, highlight a selected item (the checkbox to the left is checked) and press the center of the **Navigation Joystick**.

Options Softkey

OK - Temporarily stores choices and returns you to the Web page.

Select All - Selects all items in the list.

De-Select All - Deselects all items in the list.

Exit - The application is closed.

Options Screen Softkeys

Selecting the **Options** icon opens the **Options** screen. From this screen, certain features and options can be changed. If changes are made, press the **Options Softkey**, select **OK** and press the **Select Softkey**. To clear the cache used by **nweb**, press the **Options Softkey**, select **Clear Cache**, and press the **Select Softkey**.

Options Softkey

Cancel Softkey

OK - Saves changes to the options and returns you to the previous screen.

Reset - Resets all option parameters to their default values.

Advanced - Opens the Advanced Options screen

Clear Cache - Empties the phone's cache.

Exit - The application is closed.

Takes you to the previous screen with no action taken.

Splash Screen

The **Splash** screen is the first screen to appear when **nweb** is first launched.

Options Softkey

Menu Softkey

Exit - The application is closed.

Opens the Main Menu.

Web Page Softkeys

Where the cursor is on a Web page or what the page is doing will determine the various Softkey functions.

Options Softkey

(Various) Softkey

Done Softkey - Cursor is on an image that was zoomed. Press to return to Web page.

Menu - Takes you to the Main Menu.

Zoom - Cursor is on an image that is a link and can be enlarged.

Exit - The application is closed.

Click - Cursor is on a image or text that is also a link to another page. Press to launch that page. The cursor may also be on a button. Press to activate button.

Get Image - Cursor is on an image that didn't download. Press to download image.

Menu - Opens the Main Menu.

Stop - Page is downloading. Press to stop the downloading.

Submit - Cursor is on an object that is part of a form. Press to submit information.

Zoom - Cursor is on an image that can be enlarged. Press to enlarge image.

novarra www.novarra.com

Copyright © 2004

All rights reserved. All other brand or product names are trademarks of their respective companies or organizations.