

Checkboxes and Radio Buttons


Use the Navigation Key to highlight a radio button or checkbox. Press the Center Key to select a radio button or check/uncheck a checkbox.

Dropdown Lists

nweb displays drop down lists and allows you scroll through the choices. Long lists are broken down and you will find a checkbox with the word **---NEXT---** at the bottom of the screen. Highlight this checkbox and press the center of the Navigation Key to go to the next part of the list. A checkbox with the word **---PREVIOUS---** will be at the top of the screen enabling you to go back through the screens to the beginning of the list.


Single Choice Dropdown Lists

Single choice dropdown lists display a radio button to the left of each selection. Select the item on the list you want and press the Center Key. Press the OK Softkey to save your selection and return to the Web page.

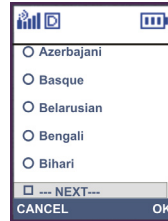

Multiple-Choice Dropdown Lists

Multiple-Choice Dropdown Lists display a checkbox to the left of each selection. Select the item(s) on the list you want and press the Center Key (press the Menu Key for a Select All or De-select All shortcut feature). Press the OK Softkey to save your selection(s) and return to the Web page.

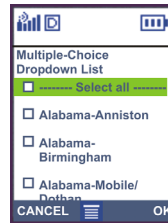

Zoom Features

Image Zoom

A special feature of **nweb** is the ability to zoom in on certain images. Highlighting an image and pressing the ZOOM Softkey enlarges the image. Use the Navigation Key to see parts of the image that are off the phone's screen.


When on an image map (a graphic containing one or more invisible regions that are linked to other items on the current page or to other Web pages), use the Center Key to initiate the hotspot (link).



nweb™ Quick Reference Card Motorola V400/V551

Special Phone Keys

Menu Key

Web pages and certain screens contain a menu of items for performing specific functions. The  symbol at the bottom center of the screen indicates there is a menu and it can be accessed by pressing the phone's Menu Key.



Softkeys

Softkey functions are indicated at the bottom of the screen and correspond to the softkey buttons directly below them.

Navigation Key/Center Key

The Navigation Key is used to move around the Web page and menus. Pressing the Center Key performs certain functions or enters other screens.

End Key

Pressing the phone's End Key while in **nweb** opens a menu with the choices Suspend, Resume and End. Highlight the choice and press the SELECT softkey.

* Key and # Key


On a Web page, each press of the * Key scrolls up one screen and the # Key scrolls down one screen.

Menus

NOTE The shortcut numbers corresponding to the menu items will change depending on what items are displayed.

Main Menu

When on a Web page, pressing the Menu Key opens the Main Menu. The commands are context sensitive and are dependent on the location of the cursor within the Web page. Press the corresponding number to initiate a command or highlight the command and press the Center Key or SELECT Softkey.

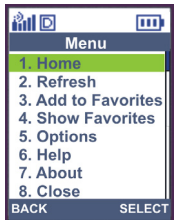

Function Screen Menus

Press the Menu Key in a function screen to access its menu. Press the corresponding number to initiate a command or highlight the command and press the Center Key or SELECT Softkey.



Menu/Softkey Commands

The Main Menu items and softkey assignments are context sensitive and will vary depending on a Web page/Function screen's content and the location of the cursor.

Menu/Softkey Command	Description
About	Displays the nweb by Novarra Version page.
Add	Opens the Edit Favorite screen with empty text fields.
Add To Favorites	Saves the current Web page to the Favorites.
Advanced	Opens the Advanced Options Screen.
Back	<i>Web Page:</i> Allows you to return to a page or series of pages that had been previously visited. <i>Menu:</i> Closes the menu and returns you to the previous screen.
Cancel	Closes the screen with no action taken.
Click	Cursor is on a link. Press to load linked page.
Close	Exits nweb .
Delete	<i>Favorite Screen:</i> Deletes the selected Favorite. <i>Address/Text Entry Screens:</i> Deletes one character to the left. Press and hold to delete all characters.
Done	<i>Favorites Screen:</i> Closes screen and returns you to previous Web page. <i>Zoomed Image:</i> Returns you to the Web page.
Edit Favorite	Opens the Edit Favorite screen with the information for the selected Favorite.
Forward	Allows you to return to a page or series of pages that had been visited after the Back function had been used.
Get Image	Cursor is on an image that has not downloaded. Press to download image.
Help	Displays the nweb Help page.
Home	Opens the Home Page set in the Options screen.
Load	Displays the Address Text Entry screen. Enter the Web address and press the OK Softkey. Press the OK Softkey again to launch the address.
OK	About Screen: Closes screen and returns you to previous Web page. <i>Drop Down Lists:</i> Accepts the selected item(s). <i>Options Screen:</i> Saves changes made to the Options. <i>Text Entry/Edit Favorite Screen:</i> Saves entered/edited information.
Open	Launches the selected Favorite.


Menu/Softkey Command	Description
Options	Displays the Options screen. On this screen, various features can be enabled/disabled.
Refresh	Displays an updated version of the current Web page.
Reset	Resets all option parameters to their default values.
Select	Chooses/initiates the highlighted item.
Show Favorites	Displays the Favorites screen. Highlight the desired Web address and press the OPEN Softkey.
Stop	Stops the downloading of the page.
Submit	Cursor on form object or button. Submits form.
Zoom	Cursor on an image that can be zoomed (enlarged).

Loading a Web Page

nweb allows you to enter a shorter version of a Web address if the protocol is http://. An example would be http://www.google.com (or www.google.com) can be entered just as google.com (you can drop the www as well). However, you must enter other protocols, such as https:// (HyperText Transfer Protocol - Secure), the protocol for access to secure Web servers.

nweb utilizes the text editing features of the phone. When in the Address Entry screen, the 0 Key changes the text entry format.

1. Press the Menu Key, select Load and press the SELECT Softkey.
-or-
Press the LOAD Softkey.
2. The Address Display screen appears. Press the Center Key. The Address Entry screen appears (see screenshot on right).
3. Enter the Web address. Press the OK Softkey. The Address Display screen appears.
4. To close the screen without launching this address, press the CANCEL Softkey.
5. To accept the address, press the OK Softkey. The Web page loads.

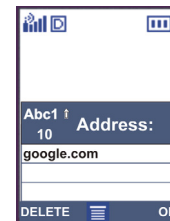

Text Entry

nweb utilizes the text editing features of the phone. When in the Text Entry screen, the 0 Key changes the text entry format. To enter text:

1. Highlight the text field or text area and press the Center Key. The Text Entry screen appears (see screenshot on right).
2. Enter the information. Press the OK Softkey. The Text Display screen appears.
3. To close the screen without saving the text entered, press the CANCEL Softkey.
4. To accept the text as entered, press the OK Softkey. The text appears in the field on the Web page.

