


nweb Quick Reference Card for Zire™ 71

nweb is easy to use because it works much like the Web browsers you use on your desktop computer. You can enter Web addresses (also called URLs - Uniform Resource Locators), create bookmarks to your favorite pages, save pages, and even download files directly to your handheld. More importantly, **nweb** is designed to be used on the small screen of your Zire 71.

For detailed information on **nweb**, refer to the **nweb version 4.4 for Zire™ 71 User Guide**.

nweb Toolbar

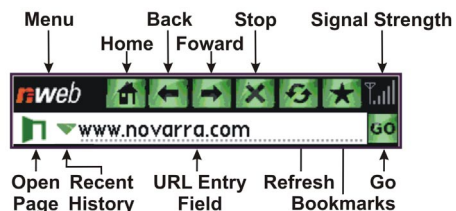

Action Icons

Action icons are the graphic representation of the most commonly used commands found in **nweb**. These icons are found on the **nweb** toolbar or on the display. A "grayed out" icon means that the command is not available. All **nweb**'s commands and shortcuts can be found on the back of this quick reference card.

Icon	Meaning
	Tap the nweb logo to display the menu.
	Tap the Home icon to be taken to a preset home page.
	Tap the Back icon to return to the previous page or series of pages last visited.
	Tap the Forward icon to return to a page or series of pages that had been visited after the Back function has been used.
	Tap the Stop icon to stop loading a page.
	Tap the Refresh icon to refresh or reload a web page.
	Tap the Bookmarks icon to go to the Bookmarks screen where you can Go to , Add , Edit and Delete bookmarks.
	Coverage Strength indicator. 0 (lowest) to 5 (highest) bars indicate the strength of the signal received.
	Tap the Open Page icon to go to the Open Page dialog box where you can enter long URLs.
	Tap the "down arrow" icon, left of the URL Entry Field , to view the recent URL history.
	Tap the Go icon to load the URL that is typed into the URL Entry Field .
	Tap to hide the Status & Title Bar .

Icon	Meaning
	Tap to show the Status & Title Bar .
	Tap the Expand Menu icon to take nweb out of Full Screen mode.
	The Search button appears when using the Find on Page function. Each time the button is tapped, the page is searched for the word entered in the Find: field.
	The End Search button appears when using the Find on Page function. When the button is tapped, the Find on Page function is closed and the URL Entry Field is returned.

Scroll Bars

Vertical scroll bars allow you to scroll up and down in order to see the information on the Web page. To use, tap and drag the black box on the scroll bar.

Horizontal scroll bars allow you to scroll left and right in order to see the information on the Web page. To use, tap and drag the black box on the scroll bar.

NOTE Horizontal scroll bars only appear when the information appears within a table (whether the table is visible or not). Once the table is off the browser viewing area, the horizontal scroll bars disappear.

Visiting A Web Page

The **URL Entry Field** and the **Open Page** dialog box are the two ways you can load Web pages by manually entering the Web address.

Using The URL Entry Field

1. Tap the **URL Entry field** with your stylus. If a URL is already in the field, drag the stylus across the text to select it, and tap the Back key on your device to remove it.
2. With Graffiti® strokes, the onscreen keyboard or built-in keyboard, spell out the URL for the page you want to visit (e.g. www.novarra.com). You do not need to enter the protocol if it is http://. However, you must enter other protocols, such as https://.
3. Tap the **Go** icon to the right of the **URL Entry field** or press the Enter key on the built-in keyboard.

Using The Open Page Dialog Box

1. Tap the **Open Page** icon with your stylus.
- or -
Tap the **nweb** logo and select **Open Page** from the **Page** menu.
2. The **Open Page** dialog box appears. You can view the Recent History to see if the address, or a portion of the address, has been visited in this session. Tap the down arrow below **URL:**.
3. Select one of the addresses in the list. You can edit this address if necessary. If you do not want to use any of these addresses, just tap off of the list.
4. With Graffiti strokes or the onscreen keyboard, edit or spell out the URL for the page you want to visit. You do not need to

enter the protocol if it is http://. However, you must enter other protocols, such as https://. The shortcut buttons can be used to quickly add in parts of the URL such as www. or .com. Tap the **more** drop down list for additional shortcuts.

5. Tap the **Go** button or press the Enter key on the built-in keyboard. After a short wait, depending on the size of the page, the page is successfully displayed in **nweb**.

Following A Link

Many Web pages contain links, which are text or images that when tapped, take you to another Web page or to another part of the same page. Like desktop browsers, **nweb** highlights text links by underlining them and giving them a distinct color. To follow a link in a Web page, tap the underlined link with your stylus.

Using Passwords

Sometimes passwords are required to enter Web sites. Passwords in **nweb** work slightly different than your desktop browsers.

1. Navigate to the Web site you want to enter. The password text field will have the word **-Unassigned-** inside it.
2. Enter your Sign-In Name (User Name, etc.) by tapping and entering the information in the appropriate field.
3. Tap the password field. Enter your password.

NOTE Each character entered is visible until another character is entered and then is replaced with an asterisk (*). Tapping outside the password field replaces the last character with an asterisk.

4. Tap the Sign In (Enter, Go, Submit, etc.) button to enter the site.

Changing The Screen Layout

nweb allows you to change your screen layout for better viewing and easier navigation. Web pages are displayed with minimum horizontal scrolling and optimized for your Zire 71's screen. **nweb** also allows you to remove the menu bar and status & title bar for a maximized viewing area.

Handheld View

In **Handheld View**, horizontal scrolling is minimized. The font size is maintained as normal (user-set). Text is wrapped and images are scaled to fit within the screen width.

1. Tap the **nweb** logo and select **Handheld View** from the **Options** menu.
2. The displayed page reformats.

Desktop View

In **Desktop View**, the Web page is displayed as it would appear on a desktop browser. Horizontal scrolling is used extensively.

1. Tap the **nweb** logo and select **Desktop View** from the **Options** menu.
2. The displayed page reformats

Full Screen

In **Full Screen** view, the menu and URL fields are removed giving a larger viewing area. **Full Screen** can be selected after choosing either **Handheld View** or **Desktop View**.

1. Tap the **nweb** logo and select **Full Screen** from the **Options** menu. The displayed page reformats.
2. To see even more of the screen, tap the **Status & Title Bar** icon.
3. To get out of **Full Screen** mode, tap the **Expand Menu** icon at the top right of the screen.

Commands, Graffiti Shortcuts and Keyboard Shortcuts

Commands	Menu	Graffiti Strokes ↷+	Keyboard ⌨+	Definition
About Novarra Browser	Options	Not Available	Not Available	Displays information such as the current version of nweb .
Beam URL	Page	Not Available	Not Available	Beams (sends) web addresses (URLs) between two handheld devices equipped with the appropriate infrared hardware.
Bookmark Page	Page	M	M	Opens the Bookmark Page dialog box. Allows you to edit the name of the bookmarked page and the URL, and assign it to a category.
Bookmarks	Page	B	B	Opens the Bookmarks list. The user can look at all bookmarks, or select a single category of bookmarks. From this list, the user can add, edit or delete bookmarks.
Connect	Options	Not Available	Not Available	Connects the device to the Internet (if in coverage). This command is visible if the device was previously disconnected or automatic connection was disabled in the Preferences .
Copy	Edit	C	C	Copies highlighted information to the system clipboard.
Cut	Edit	X	X	Cuts highlighted information (in text fields only) to the system clipboard.
Desktop View	Options			The Web page is displayed as it would appear on a desktop browser. Horizontal scrolling will be used extensively.
Disconnect	Options	Not Available	Not Available	Allows the user to manually disconnect from the Internet. This feature is only visible when the device is connected to the Internet.
Display Options	Options	Y	Y	Opens the Display Options dialog box. Allows the user to set the graphics quality and the color of the links.
Find on Page	Page	Not Available	Not Available	Displays the Find: field. Allows the user to search the Web page for specific word(s).
Font	Options	F	F	Open the Select Font dialog box. Allows the user to set the size of the fonts.
Full Screen	Options	N	N	In Full Screen View, the menu and URL fields are removed giving a larger viewing area. To get out of Full Screen mode, tap the Expand Menu icon.

Commands	Menu	Graffiti Strokes ↷+	Keyboard ⌨+	Definition
Graffiti	Edit	G	Not Available	Opens the Graffiti Help screen.
Handheld View	Options	E	E	Horizontal scrolling is minimized. Font size is maintained as normal (user-set). Text is wrapped and images are scaled to fit within the screen width.
History	Page	h	H	Opens the History list. This list can be cleared or the user can go to a previously visited page.
Keyboard	Edit	K	Not Available	Opens the Keyboard screen.
Messages	Inbox	Not Available	Not Available	Opens the Inbox screen. From the Inbox , the user can view pushed messages and URLs.
Network	Options	T	T	Leaves the nweb application and opens Palm OS Network Preferences.
Open Page	Page	O	O	Opens the Open Page dialog box. Allows the user to enter the URL they want to browse.
Page Info	Page	I	I	Opens the Page Info dialog box. Displays the page name, size and URL to the user.
Paste	Edit	P	P	Pastes the contents of the system clipboard into a text field or other application.
Preferences	Options	R	R	Opens the Preferences screen. Allows the user to change the home page, clear the cache and enable/disable certain features of nweb . For more information, see the nweb version 4.5 for Palm OS Handhelds User Guide.
Save Page	Edit	V	V	Opens the Save Page dialog box. Allows the user to edit the name of the saved page and assign it to a category.
Save Page As	Page	A	A	Opens the Save Page dialog box. Allows the user to edit the name of the saved page and assign it to a category.
Saved Pages	Page	D	D	Opens the Saved Pages screen.
Select All	Page	S	S	Selects all the text within a text field or web page.
Undo	Edit	U	U	Undoes the last cut or past action.

novarra www.novarra.com

Copyright © 2004

All rights reserved. All other brand or product names are trademarks of their respective companies or organizations.