



nweb™ Quick Reference Card Tapwave™ Zodiac™

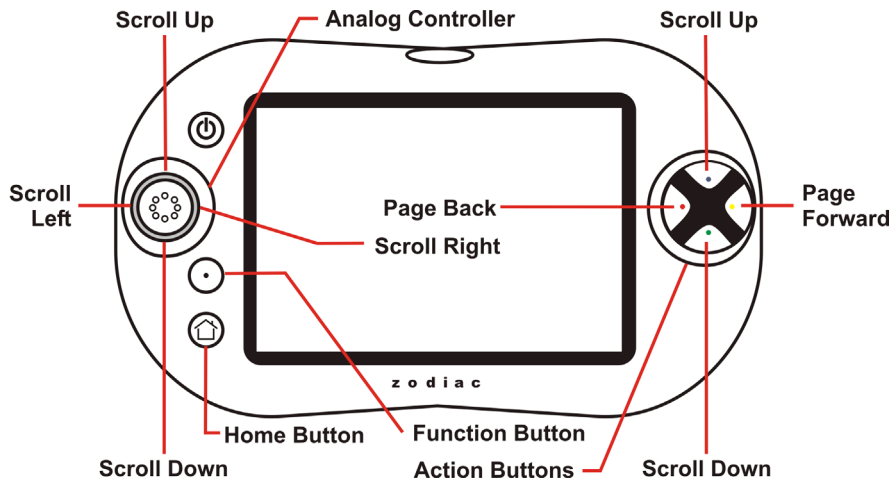

nweb Toolbar & Action Icons

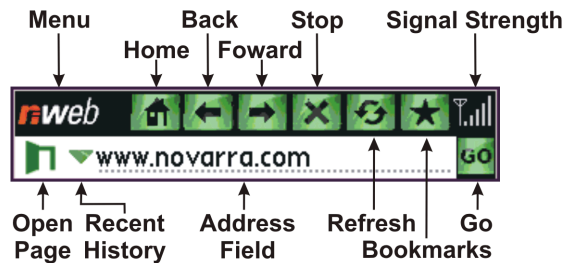

Action icons are the graphic representation of the most commonly used commands found in **nweb**. These icons are found on the **nweb** toolbar or on the display.

Icon	Description
	Displays the menu.
	Home - Opens the preset home page.
	Back - Allows the return to a page or series of pages that had been previously visited.
	Forward - Allows the return to a page or series of pages that had been visited after the Back function had been used.
	Stop - Stops the downloading of the page.
	Refresh - Displays an updated version of the current Web page.
	Bookmarks - Opens the Bookmarks screen where various functions (Go to, Add, Edit and Delete) can be performed.
	Coverage Strength Indicator - 0 (lowest) to 5 (highest) bars indicate the strength of the signal received.

Icon	Description
	Open Page - Displays the Open Page dialog box where long Web addresses can be entered.
	Recent History - Opens the recent URL history list.
	Go - Loads the Web address that is typed into the Address Field.
	Hide Bar - Removes the Status & Title Bar.
	View Bar - Displays the Status & Title Bar.
	Expand Menu - Takes nweb out of Full Screen mode.
	Search Button - Appears when using the Find on Page function. Each time the button is tapped, the page is searched for the word entered in the Find: field.
	End Search Button - Appears when using the Find on Page function. When the button is tapped, the Find on Page function is closed and the Address Field is returned.

Menu Commands

nweb menus are accessed by tapping the **nweb** logo. Menu commands are separated into three categories: Page, Edit and Options. The following table is an alphabetical listing of **nweb**'s commands and their descriptions.

Command	Menu	Description
About Novarra Browser	Options	Displays information such as the current version of nweb .
Beam URL	Page	Beams (sends) Web addresses (URLs) between two handheld devices equipped with the appropriate infrared hardware.
Bookmark Page	Page	Opens the Bookmark Page dialog box. Allows you to edit the name of the bookmarked page and the URL, and assign it to a category.
Bookmarks	Page	Opens the Bookmarks list. The user can look at all bookmarks, or select a single category of bookmarks. From this list, the user can add, edit or delete bookmarks.
Connect	Options	Connects the device to the Internet (if in coverage). This command is visible if the device was previously disconnected or automatic connection was disabled in the Preferences.
Copy	Edit	Copies highlighted information to the system clipboard.
Cut	Edit	Cuts highlighted information (in text fields only) to the system clipboard.
Desktop View	Options	The Web page is displayed as it would appear on a desktop browser. Horizontal scrolling will be used extensively.
Disconnect	Options	Allows the user to manually disconnect from the Internet. This feature is only visible when the device is connected to the Internet.
Display Options	Options	Opens the Display Options dialog box. Allows the user to set the graphics quality and the color of the links.
Find on Page	Page	Displays the Find: field. Allows the user to search the Web page for specific word(s).
Font	Options	Open the Select Font dialog box. Allows the user to set the size of the fonts.
Full Screen	Options	In Full Screen View, the menu and URL fields are removed giving a larger viewing area. To get out of Full Screen mode, tap the Expand Menu icon.
Graffiti 2 Help	Edit	Opens the Graffiti 2 Help screen.

Command	Menu	Description
Handheld View	Options	Horizontal scrolling is minimized. Font size is maintained as normal (user-set). Text is wrapped and images are scaled to fit within the screen width.
History	Page	Opens the History list. This list can be cleared or the user can go to a previously visited page.
Keyboard	Edit	Opens the Keyboard screen.
Network	Options	Leaves the nweb application and opens Palm OS Network Preferences.
Open Page	Page	Opens the Open Page dialog box. Allows the user to enter the URL they want to browse.
Page Info	Page	Opens the Page Info dialog box. Displays the page name, size and URL to the user.
Paste	Edit	Pastes the contents of the system clipboard into a text field or other application.
Preferences	Options	Opens the Preferences screen. Allows the user to change the home page, clear the cache and enable/disable certain features of nweb . For more information, see the nweb version 4.5 for Palm OS Handhelds User Guide.
Save Page	Edit	Opens the Save Page dialog box. Allows the user to edit the name of the saved page and assign it to a category.
Saved Pages	Page	Opens the Saved Pages screen.
Select All	Page	Selects all the text within a text field or web page.
Undo	Edit	Undoes the last cut or past action.
Zoomed Out	Options	Displays the entire Web page and allows you to select a portion of the page for viewing.

Visiting A Web Page

The Address Field and the Open Page dialog box are the two ways you can load Web pages by manually entering the Web address.

Using The Address Field

1. Tap the Address Field with your stylus. If a URL is already in the field, drag the stylus across the text to select it, and tap the Back key on your device to remove it.
2. With Graffiti® 2 strokes or the on screen keyboard, spell out the URL for the page you want to visit (e.g. www.novarra.com). You do not need to enter the protocol if it is http://. However, you must enter other protocols, such as https://.
3. Tap the Go icon to the right of the Address Field.

Using The Open Page Dialog Box

1. Tap the Open Page icon with your stylus.
- or -
Tap the **nweb** logo and select Open Page from the Page menu.
2. The Open Page dialog box appears. You can view the Recent History to see if the address, or a portion of the address, has been visited in this session. Tap the down arrow below URL:.
3. Select one of the addresses in the list. You can edit this address if necessary. If you do not want to use any of these addresses, just tap off of the list.

4. With Graffiti® 2 strokes or the on screen keyboard, edit or spell out the URL for the page you want to visit. You do not need to enter the protocol if it is http://. However, you must enter other protocols, such as https://. The shortcut buttons can be used to quickly add in parts of the URL such as www. or .com. Tap the more drop down list for additional shortcuts.
5. Tap the Go button. After a short wait, depending on the size of the page, the page is successfully displayed in **nweb**.

Following A Link

Many Web pages contain links, which are text or images that when tapped, take you to another Web page or to another part of the same page. Like desktop browsers, **nweb** highlights text links by underlining them and giving them a distinct color. To follow a link, tap the underlined link with your stylus.

Changing The Screen Layout

nweb allows you to change your screen layout for better viewing and easier navigation. You can have the Web pages displayed with minimum horizontal scrolling and optimized for your handheld's screen, or have them displayed as on your desktop browser. **nweb** also allows you to remove the menu bar and status & title bar for a maximized viewing area.

Handheld View

In Handheld View, horizontal scrolling is minimized. The font size is maintained as normal (user-set). Text is wrapped and images are scaled to fit within the screen width.

1. Tap the **nweb** logo.
2. Select Handheld View from the Options menu. The displayed page reformats.

Desktop View

In Desktop View, the Web page is displayed as it would appear on a desktop browser. Horizontal scrolling is used extensively.

1. Tap the **nweb** logo.
2. Select **Desktop View** from the **Options** menu. The displayed page reformats.

Full Screen

In Full Screen view, the menu and URL fields are removed giving a larger viewing area. Full Screen can be selected after choosing either Handheld View or Desktop View.

1. Tap the **nweb** logo and select Full Screen from the Options menu. The displayed page reformats.
2. To see even more of the screen, tap the Status & Title Bar icon.
3. To get out of Full Screen mode, tap the Expand Menu icon at the top right of the screen.

Zoomed Out View

Navigation around a content-rich Web page is easier using the Zoomed Out View.

1. Tap the **nweb** logo and select Zoomed Out View from the Options menu. The displayed page reformats.
2. Using your stylus, drag the selection frame (box) over the portion of the Web page you want to see.
3. Lift the stylus off the screen. The displayed page goes into Desktop View at the area you selected.



novarra
Copyright © 2005

All rights reserved. All other brand or product names are trademarks of their respective companies or organizations