


nweb™ Quick Reference Card Sprint® Phones with Palm OS®

nweb is easy to use because it works much like the Web browsers you use on your desktop computer. You can load Web pages and create bookmarks to your favorite pages. More importantly, nweb is designed to be used on the small screen of your phone.

nweb Toolbar & Action Icons

Action icons are the graphic representation of the most commonly used commands found in nweb. These icons are found on the nweb toolbar or on the display.

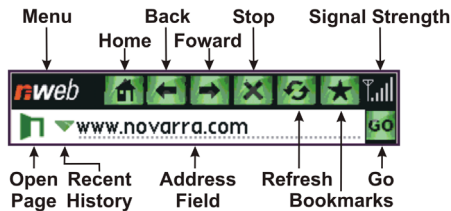

Icon	Description
	Displays the menu.
	Home - Opens the preset home page.
	Back - Allows the return to a page or series of pages that had been previously visited.
	Forward - Allows the return to a page or series of pages that had been visited after the Back function had been used.
	Stop - Stops the downloading of the page.
	Refresh - Displays an updated version of the current Web page.
	Bookmarks - Opens the Bookmarks screen where various functions (Go to, Add, Edit and Delete) can be performed.
	Coverage Strength Indicator - 0 (lowest) to 5 (highest) bars indicate the strength of the signal received.
	Open Page - Displays the Open Page dialog box where long Web addresses can be entered.
	Recent History - Opens the recent URL history list.
	Go - Loads the Web address that is typed into the Address Field.
	Hide Bar - Removes the Status & Title Bar.
	View Bar - Displays the Status & Title Bar.

Menu Commands

nweb menus are accessed by tapping the nweb logo. Menu commands are separated into three categories: Page, Edit and Options. The following table is an alphabetical listing of nweb's commands and their descriptions.

Command	Menu	Description
About Novarra Browser	Options	Displays information such as the current version of nweb.
Beam URL	Page	Beams (sends) Web addresses (URLs) between two handheld devices equipped with the appropriate infrared hardware.
Bookmark Page	Page	Opens the Bookmark Page dialog box. Allows you to edit the name of the bookmarked page and the URL, and assign it to a category.
Bookmarks	Page	Opens the Bookmarks list. The user can look at all bookmarks, or select a single category of bookmarks. From this list, the user can add, edit or delete bookmarks.
Connect	Options	Connects the device to the Internet (if in coverage). This command is visible if the device was previously disconnected or automatic connection was disabled in the Preferences.
Copy	Edit	Copies highlighted information to the system clipboard.
Cut	Edit	Cuts highlighted information (in text fields only) to the system clipboard.
Desktop View	Options	The Web page is displayed as it would appear on a desktop browser. Horizontal scrolling will be used extensively.
Disconnect	Options	Allows the user to manually disconnect from the Internet. This feature is only visible when the device is connected to the Internet.
Display Options	Options	Opens the Display Options dialog box. Allows the user to set the graphics quality and the color of the links.
Font	Options	Open the Select Font dialog box. Allows the user to set the size of the fonts.
Graffiti Help	Edit	Opens the Graffiti Help screen.
History	Page	Opens the History list. This list can be cleared or the user can go to a previously visited page.
Keyboard	Edit	Opens the Keyboard screen.
Mail URL	Page	E-mail Web addresses (URLs) through your devices's e-mail application.
Network	Options	Leaves the nweb application and opens Palm OS Network Preferences.
Open Page	Page	Opens the Open Page dialog box. Allows the user to enter the URL they want to browse.
Page Info	Page	Opens the Page Info dialog box. Displays the page name, size and URL to the user.

Command	Menu	Description
Paste	Edit	Pastes the contents of the system clipboard into a text field or other application.
Preferences	Options	Opens the Preferences screen. Allows the user to change the home page, clear the cache and enable/disable certain features of <i>nweb</i> . For more information, see the <i>nweb</i> version 2.0 for Sprint Phones with Palm OS Phones User's Guide.
Save Page	Edit	Opens the Save Page dialog box. Allows the user to edit the name of the saved page and assign it to a category.
Saved Pages	Page	Opens the Saved Pages screen.
Select All	Page	Selects all the text within a text field or web page.
Undo	Edit	Undoes the last cut or past action.

Visiting A Web Page

The Address Field and the Open Page dialog box are the two ways you can load Web pages by manually entering the Web address.

Using The Address Field

1. Tap the Address Field with your stylus. If a URL is already in the field, drag the stylus across the text to select it, and tap the Back key on your device to remove it.
2. With Graffiti® strokes, the on screen keyboard or built-in keyboard, spell out the URL for the page you want to visit (e.g. www.novarra.com). You do not need to enter the protocol if it is http://. However, you must enter other protocols, such as https://.

Tap the Go icon to the right of the Address Field or press the Enter key on the built-in keyboard.

Using The Open Page Dialog Box

1. Tap the Open Page icon with your stylus.
- or -
Tap the *nweb* logo and select Open Page from the Page menu.
2. The Open Page dialog box appears. You can view the Recent History to see if the address, or a portion of the address, has been visited in this session. Tap the down arrow below URL:.
3. Select one of the addresses in the list. You can edit this address if necessary. If you do not want to use any of these addresses, just tap off of the list.
4. With Graffiti strokes or the on screen keyboard, edit or spell out the URL for the page you want to visit. You do not need to enter the protocol if it is http://. However, you must enter other protocols, such as https://. The shortcut buttons can be used to quickly add in parts of the URL such as www. or .com. Tap the more drop down list for additional shortcuts.
5. Tap the Go button or press the Enter key on the built-in keyboard. After a short wait, depending on the size of the page, the page is successfully displayed in *nweb*.

Following A Link

Many Web pages contain links, which are text or images that when tapped, take you to another Web page or to another part of the same page. Like desktop browsers, *nweb* highlights text links by underlining them and giving them a distinct color. To follow a link, tap the underlined link with your stylus.

Using Passwords

Sometimes passwords are required to enter Web sites. Passwords in *nweb* work slightly different than your desktop browsers.

1. Navigate to the Web site you want to enter. The password text field will have the word **-Unassigned-** inside it.
2. Enter your Sign-In Name (User Name, etc.) by tapping and entering the information in the appropriate field.
3. Tap the password field. A pop-up dialog box appears. Enter your password.
4. Tap OK. The dialog box closes and **-Assigned-** appears inside the password text field.
5. Tap the Sign In (Enter, Go, Submit, etc.) button to enter the site.

Bookmarks

Adding Bookmarks

1. Open the Web address (URL) you want to add as a bookmark.
2. Tap the *nweb* logo and select Bookmark Page from the Page menu.
3. The default values for the bookmark's address and name are taken from the page. You can keep this name or enter a name by which to remember the page.
4. Select a Category in which to file this bookmark under. The default is Unfiled.
5. Tap the Save button. The page URL is added to your Bookmarks list under the category you selected.

Viewing Bookmarks

1. Tap the Bookmarks icon or tap the *nweb* logo and select Bookmarks from the Page menu.
2. The Bookmarks list opens and the default Category is All. You can change the Category to limit the bookmarks displayed by tapping the Category pick list and selecting the category.
3. Select the name of the bookmark you want to visit, and tap the Go button. The selected bookmarked page URL is now loaded.

Editing Bookmarks

1. Tap the Bookmarks icon or tap the *nweb* logo and select Bookmarks from the Page menu.
2. The Bookmarks list opens and the default Category is All. You can change the Category to limit the bookmarks displayed by tapping the Category pick list and selecting the category.
3. Select the name of the bookmark you want to edit, and tap the Edit button.
4. Make changes (Name, Category, or URL) and tap the Save button. The edited bookmark appears in your Bookmarks list.
5. Tap Done to close the Bookmarks list.

Deleting Bookmarks

WARNING If a Bookmark is deleted, it cannot be recovered

1. Tap the Bookmarks icon or tap the *nweb* logo and select Bookmarks from the Page menu.
2. The Bookmarks list opens and the default Category is All. You can change the Category to limit the bookmarks displayed by tapping the Category pick list and selecting the category.
3. Select the name of the bookmark you want to delete, and tap the Delete button.
4. A confirmation dialog box appears. Tap OK.
5. The bookmark is now deleted and removed from the Bookmarks list. Tap Done to close the Bookmarks list.

